



Steering Control Adapter 29–678 Nissan X Trail(08>) with Phone button Nissan Note (07>)

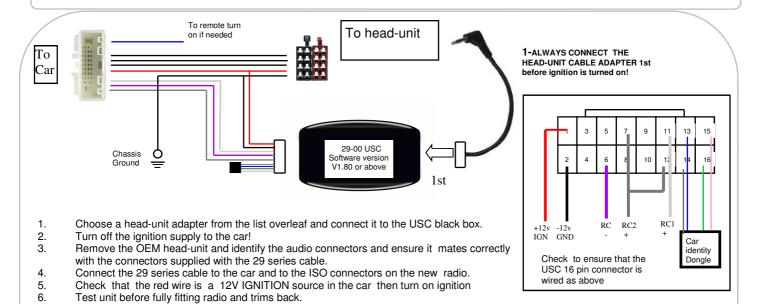

If car is amplified connect blue/white wire to remote turn on from new car radio & use item 20-273 Bose adapter

If Problems: Check that correct adapter has been used and links are in the correct place. Always disconnect from the power supply if you change the head-unit adapter lead. Check that Red wire is 12V ignition and not Permanent power. Check that head-unit is earthed and black wire is earth. Check all connections are the same as the wiring diagram shown here

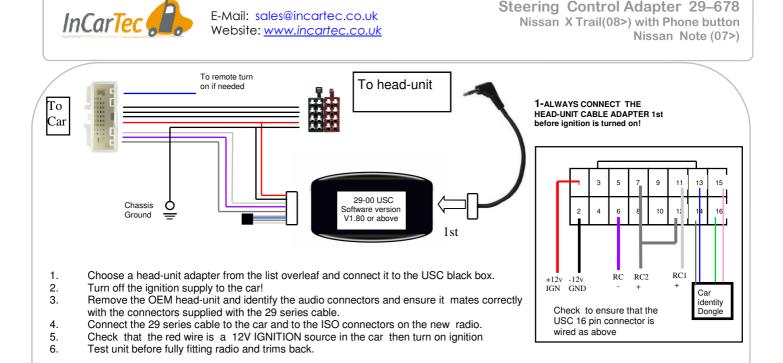

If car is amplified connect blue/white wire to remote turn on from new car radio & use item 20-273 Bose adapter

If Problems: Check that correct adapter has been used and links are in the correct place. Always disconnect from the power supply if you change the head-unit adapter lead. Check that Red wire is 12V ignition and not Permanent power. Check that head-unit is earthed and black wire is earth. Check all connections are the same as the wiring diagram shown here

CHOOSE THE CORRECT HEAD-UNIT ADAPTER FROM THOSE BELOW

